

Team QIK Racing

109 Rocket Bandit PWD Body CAGE

(see <https://teamqik.com/racing> for CLASS RULES and MORE)

By Lynxtuff [Lynxtuff.com](https://lynxtuff.com)

Assembly Instructions (23.09.28.01)

Assemble BODY as shown in STEPS 1 thru 9 below.

CONTENTS:

Rail Set

- Front Left
- Front Right
- Rear Left
- Rear Right

Cage Hood

Cage Front Bar

Cage Rear Bar

Cage Cross Brace

Cage Side Braces

Cockpit


Rear Mount

Panel Set

- Hood
- Middle Top
- Rear Top
- Side Front Left
- Side Front Right
- Side Rear Left
- Side Rear Right

Screw Set


- M3 x 16mm (22)
- M3 x 10mm (2)
- M3 x 6mm (26)

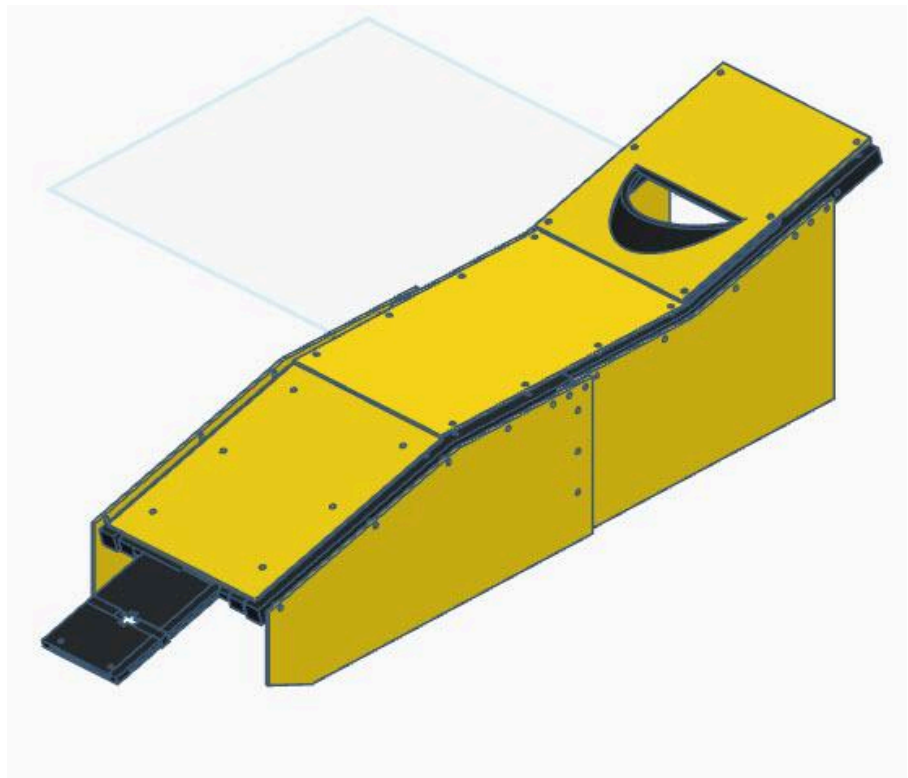

STEP 1

Using 3 M3x16 BH screws


Attach LEFT REAR SIDE PANEL and FRONT BAR and REAR BAR to REAR RAIL

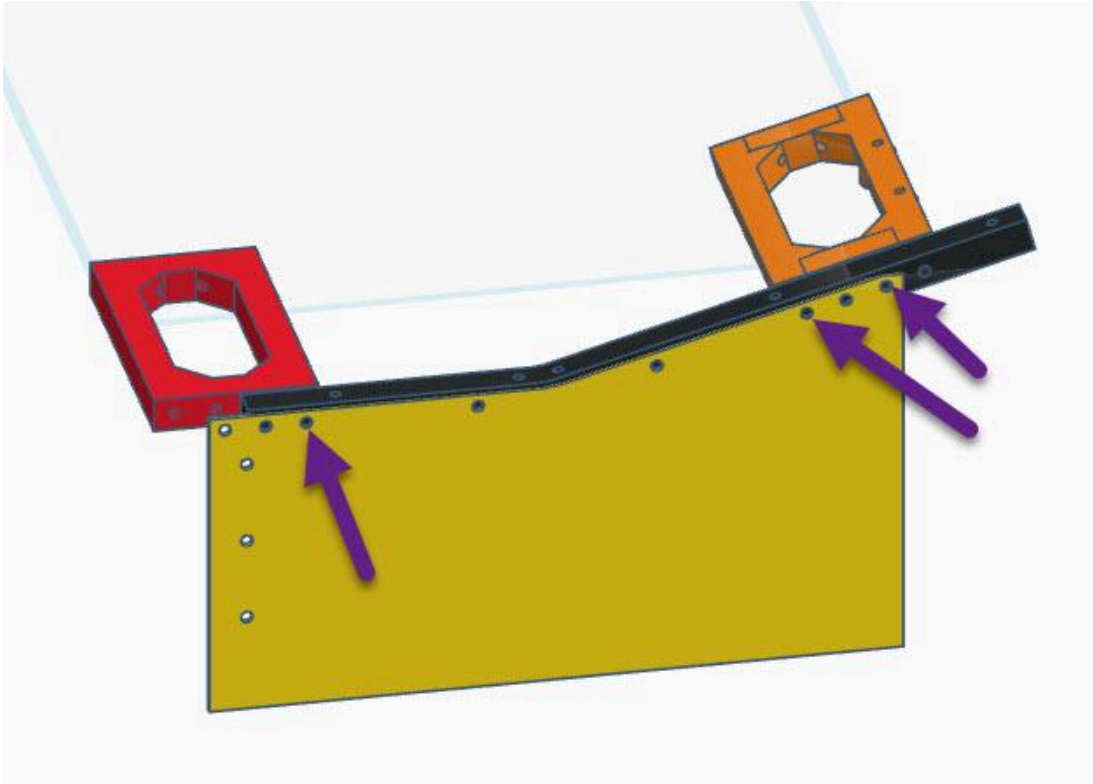

STEP 2

Using 6 M3x16 BH screws


Attach LEFT FRONT SIDE PANEL and HOOD FRAME to FRONT RAIL

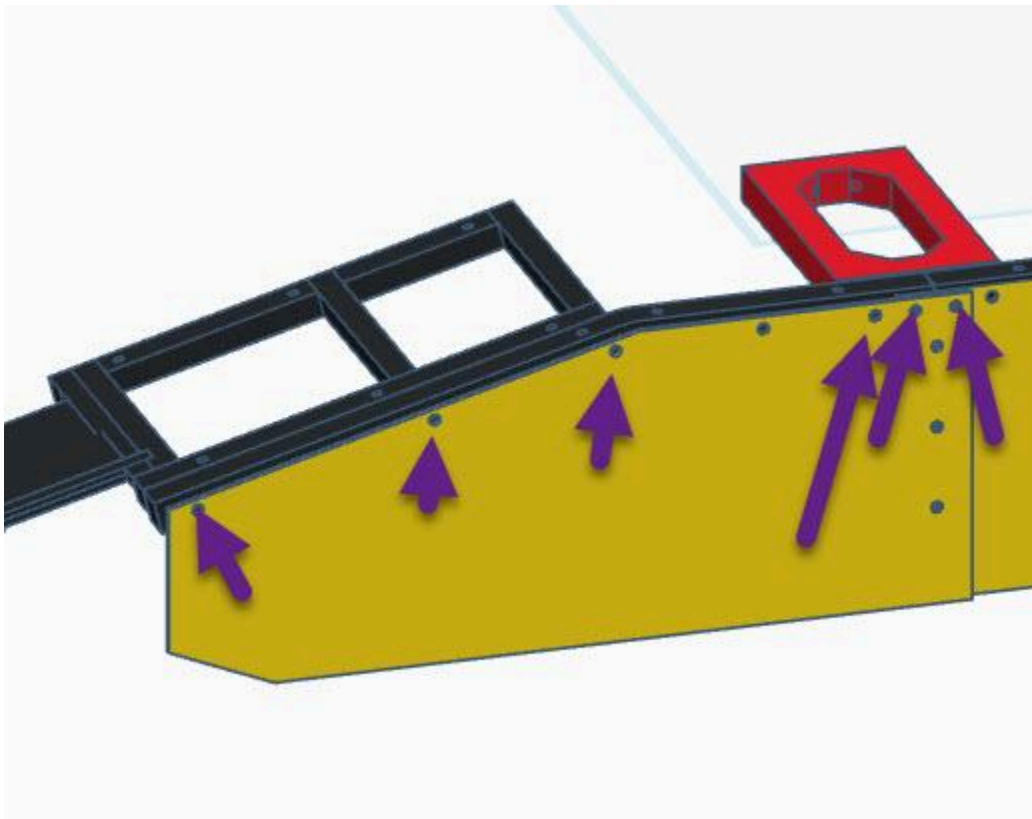

STEP 3

Using 9 M3x16 BH screws


Attache RIGHT FRONT PANEL, REAR SIDE PANEL, REAR RAIL, and FRONT RAIL as shown

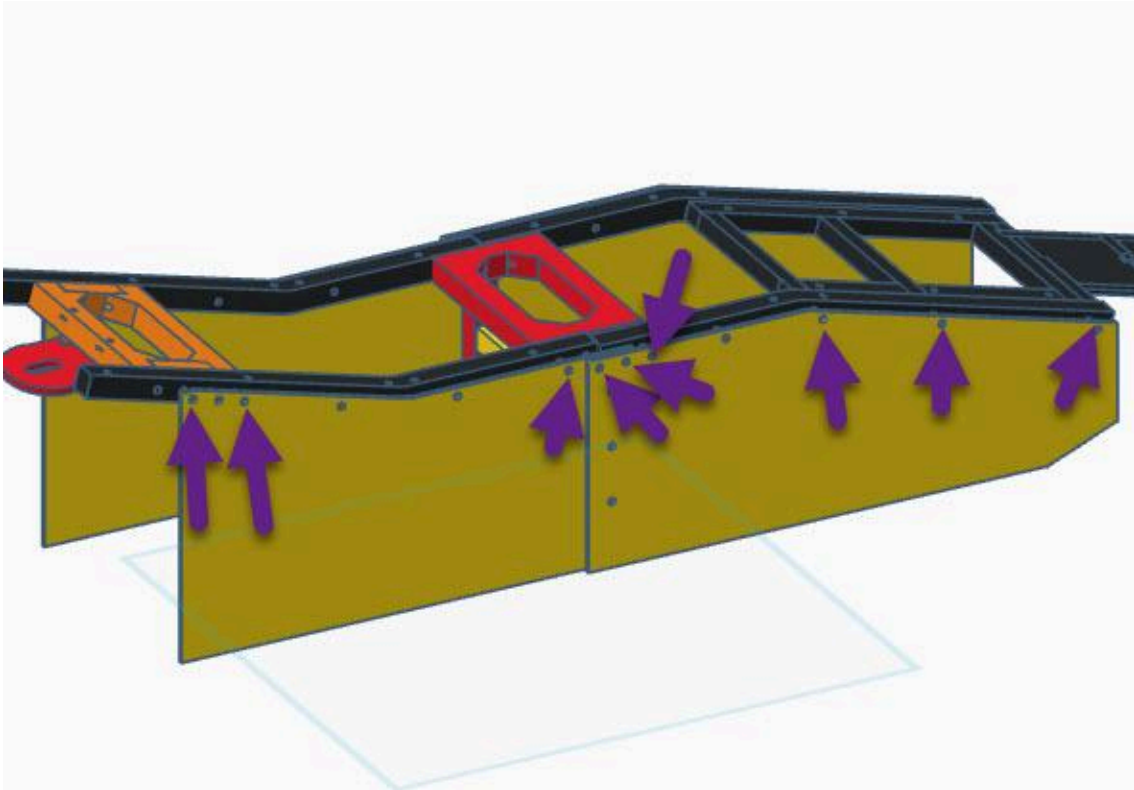

STEP 4


Using 2 M3x16 BH screws

Attache SIDE BRACES (2) and CROSS BRACE as shown

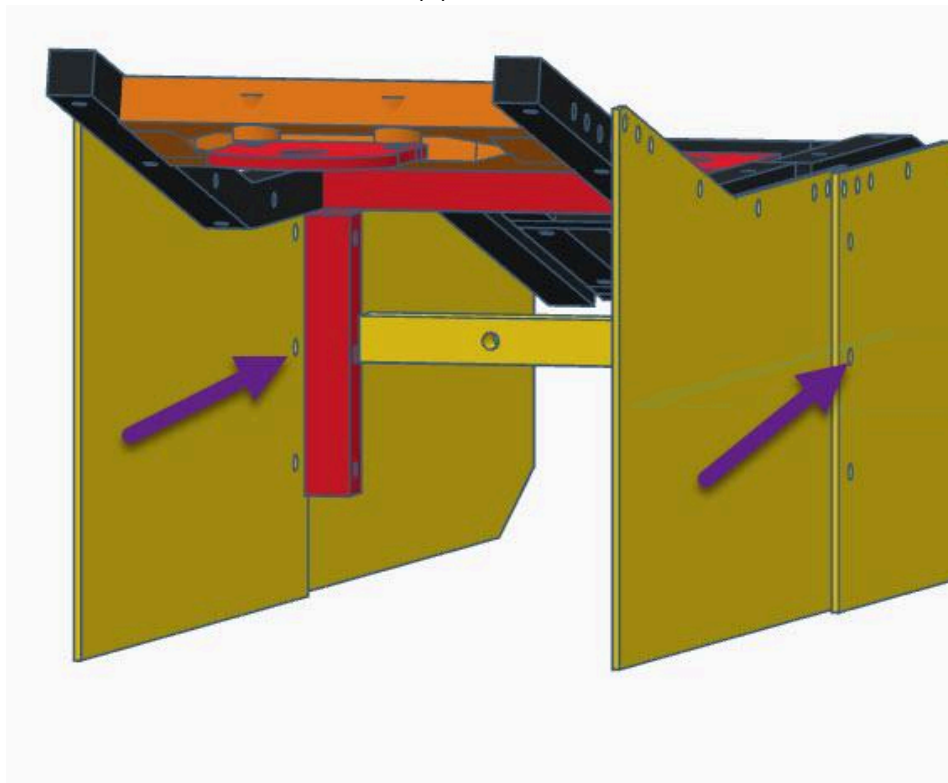


STEP 5

Using 4 M3x6 BH screws
Finish attaching SIDE BRACE (2) to SIDE PANELS as shown

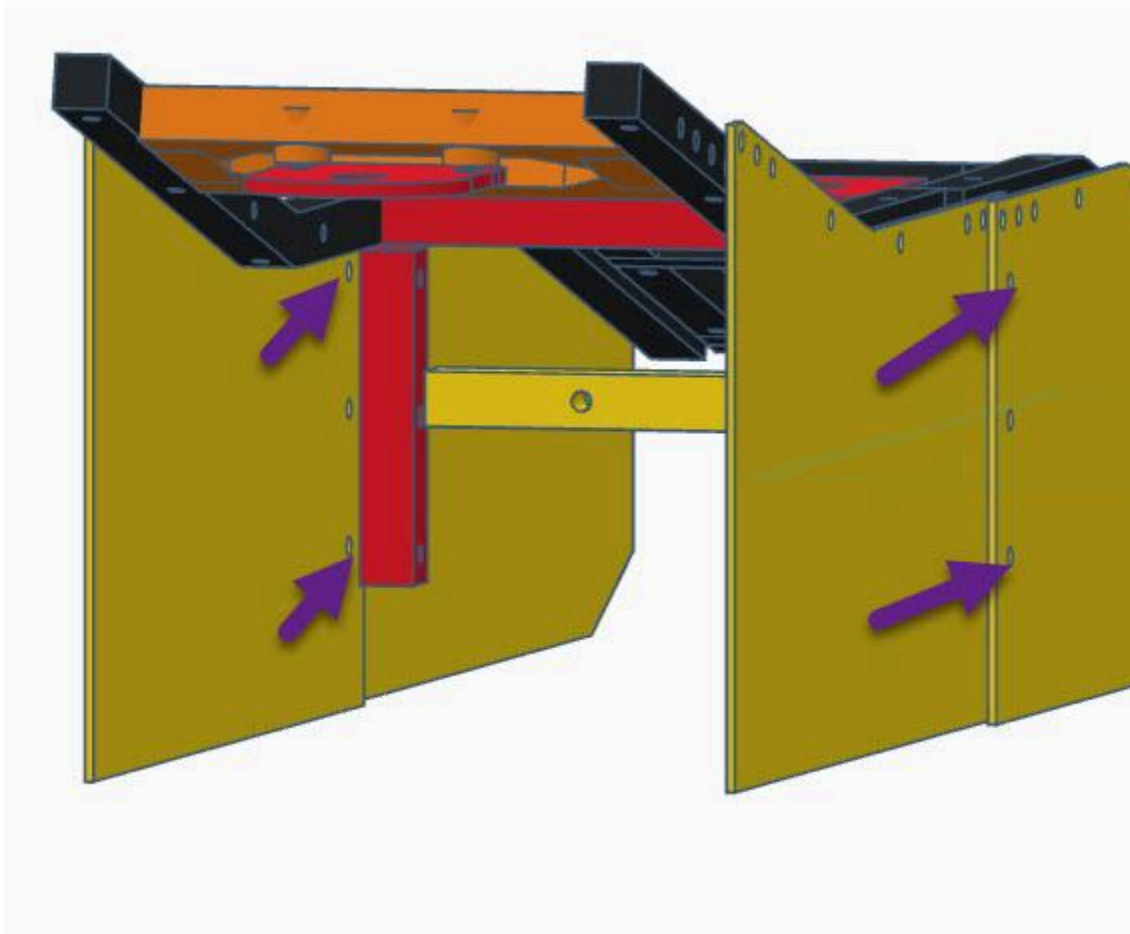


STEP 6

Using 6 M3x16 BH screws
3 screws on each side
Finish attaching SIDE PANELS on both sides as shown

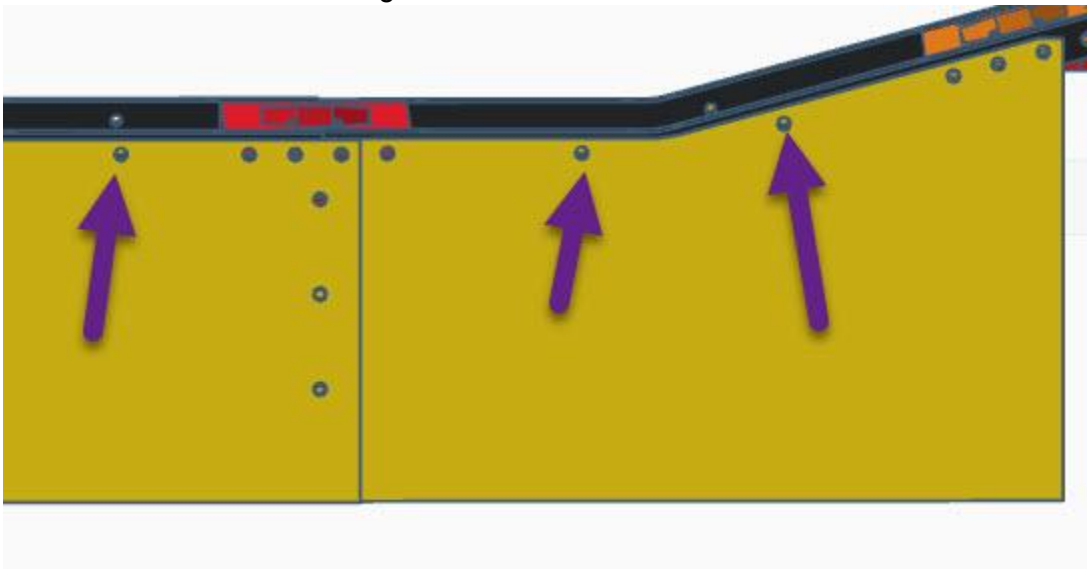


STEP 7

Using 6 M3x6 BH screws
Sandwich COCKPIT between REAR TOP PANEL and frame as shown

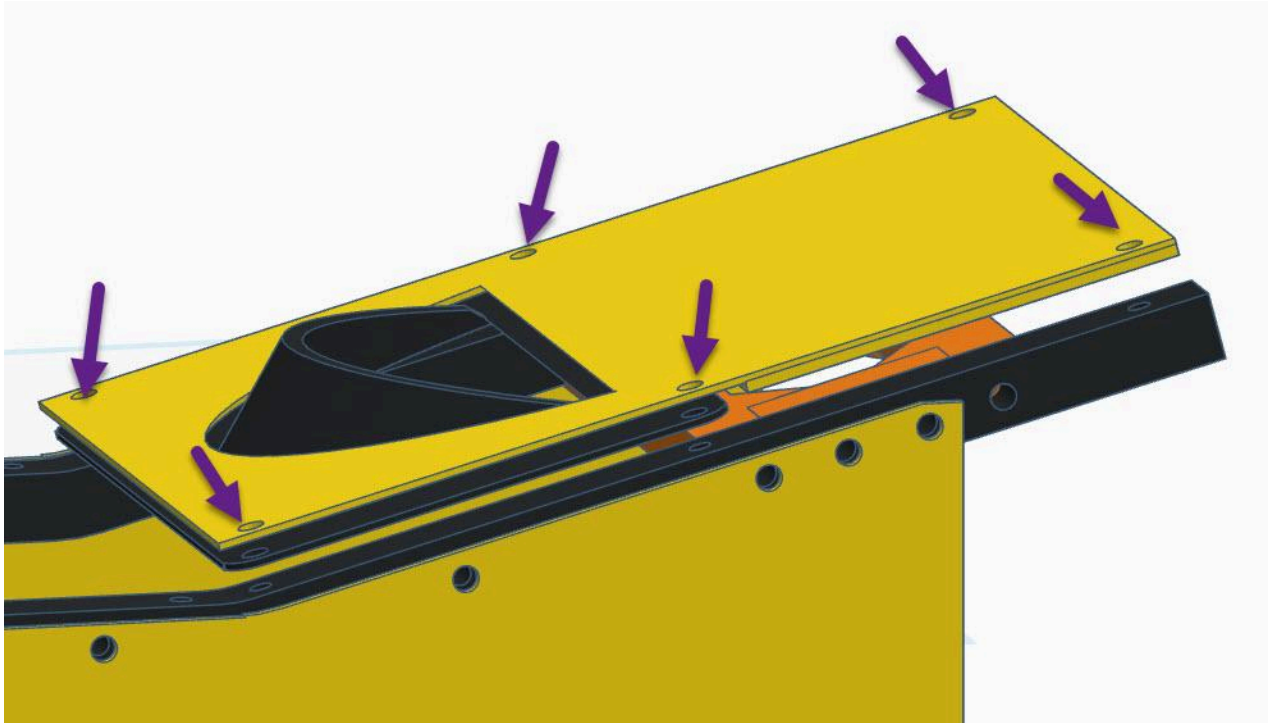

STEP 8

Using 14 M3x16 BH screws
Attach HOOD PANEL and MIDDLE TOP PANEL to RAILS as shown

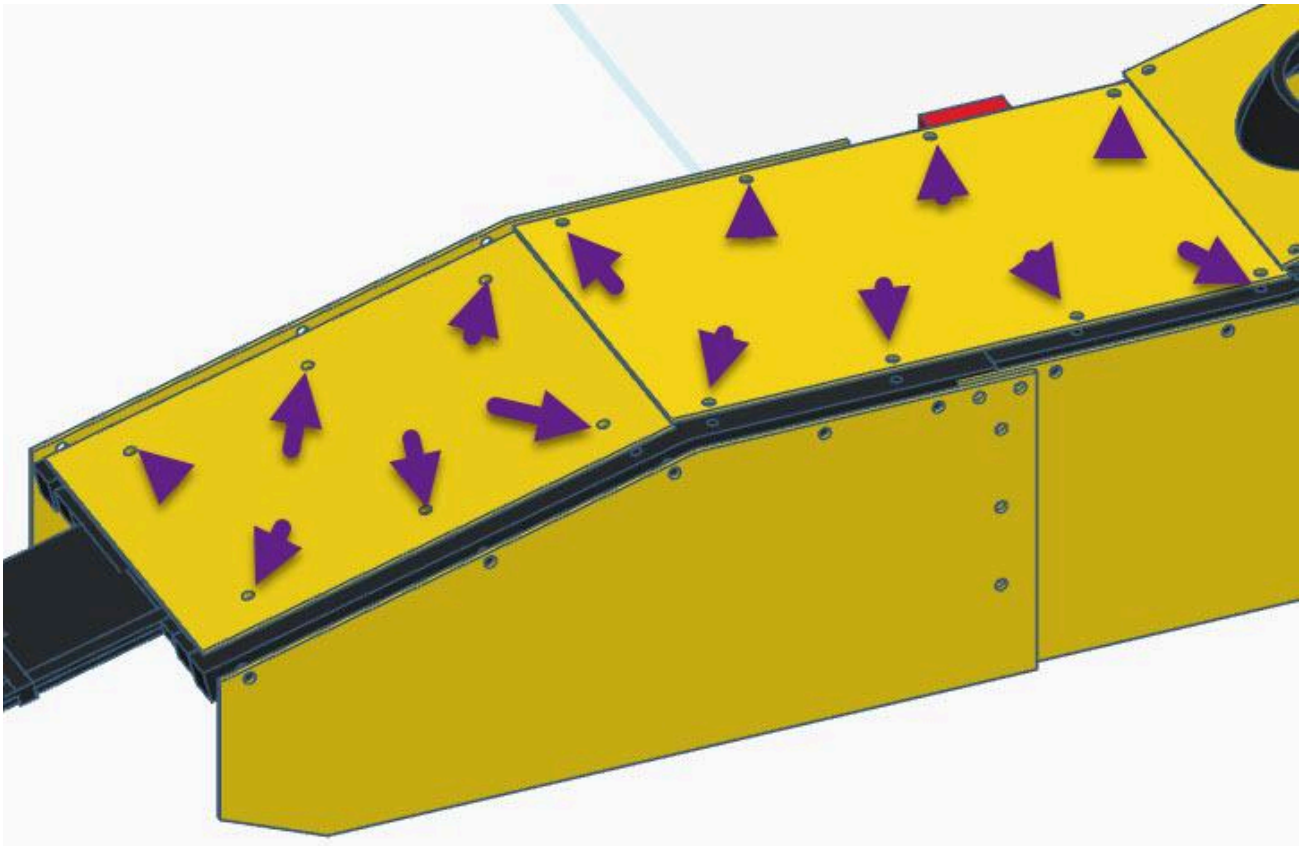

STEP 9

Using 2 M3x10 BH screws

Position as needed MOUNT and fasten to REAR MOUNT BAR as shown

