


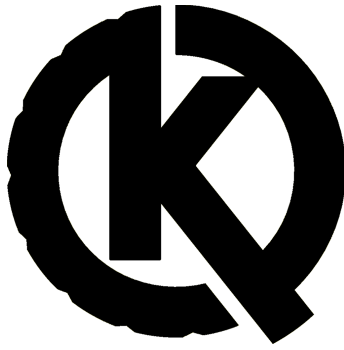

Team QIK Racing™

784 “Zer0-Mod” Bandit Wingless Sprint (Cage & Panels)

Build Guide (24.09.10.01)

Assemble the Cage using 3D Printed or Lexan Panel Set

NOTES:

A) Carefully recognize the LEFT and RIGHT Cage sides

Be sure to “sandwich” the side panels during steps 3-5 below

1. Attach NET to CROSS BRACE (square bar with 2 small holes) (2ea M3 x 5mm)
2. Attach SCOOP to HOOD (scoop pops up thru hood) using 4 screws (4ea M3 x 5 mm)
3. Attach EXHAUST HEADERS to each SIDE CAGE (4ea M3 x 14mm)
4. Attach NERF BARS to each SIDE CAGE (4ea M3 x 16mm)
5. Assemble Cage by Attaching the following components...
 - a. Front & Rear COVER BRACES
 - i. Older models = (square bars w/ 2 small holes), holes up (4ea M3 x 16mm)
 - ii. Newer models = CAGE-COVER, holes up (4ea M3 x 16mm)
 - b. HOOD (4ea M3 x 16mm)
 - c. REAR CAGE FRAME (2ea M3 x 16mm)
 - i. Older models = UPPER & LOWER REAR CROSS BARS (square bar with 2 small holes)
 - d. FAR REAR CROSS BRACE (2ea M3 x 16mm)
6. Attach Rear BODY MOUNT to Far Rear Cross Bar (2ea M3 x 16mm)
7. Attach Lexan or 3D Hood and Cover panels (10ea M3 x 5mm)
8. Add additional Side Panel screws to top and bottom of Side Panels (10ea M3 x 5mm)

CONTENTS:


- 1) Cage Left Side
- 2) Cage Right Side
- 3) Cage Hood
- 4) Cage Bar (x2)
- 5) Cage Rear Frame
- 6) Cage Cover Frame
- 7) Nerf set
- 8) Header set
- 9) Rear Mount
- 10) Scoop
- 11) Net
- 12) Tank (not shown)

Screw Set

M3 x 16mm (22)
M3 x 14mm (8)
M3 x 5mm (16)

Panel Set: (sold separately)

- 13) Panel Left Side
- 14) Panel Right Side
- 15) Panel Hood
- 16) Panel Cover

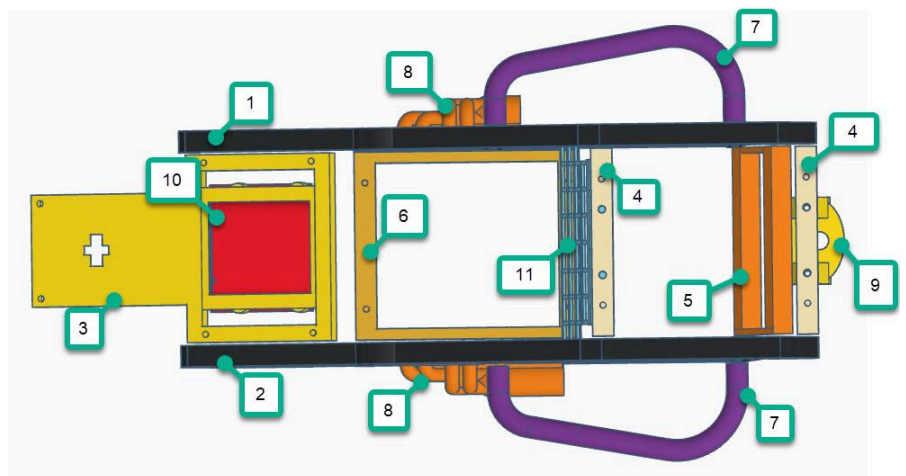

- 17) Window Panel set (option)
18) Panel Left Side (optional)
19) Panel Right Side (option)

