


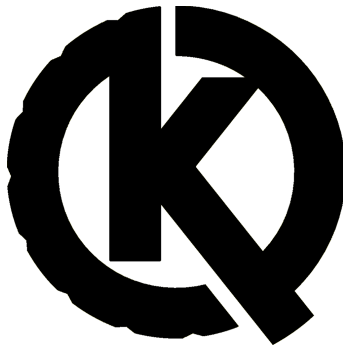

Team QIK Racing™

Shock Tower Extension Kit (784-70)

(Shock Limiter ELIMINATOR)

Build Guide (26.03.24.01)

Installation Instructions

1. Attach front shock tower extensions using the cylinder mounting bushing and **M3x10 BH** screws in the top holes to the front of the shock tower.
2. Use the **flanged M3x20 BH** screws to replace the inner Front Toe Link Screws.
3. Use the **M3 NyLocs** to hold the lower end of FRONT Shock Extensions in place.
4. Using **M3x20 BH** screws and 6 mm stand-offs, fasten the top of the shocks to the desired holes in the extension pieces. The recommended setting is the center hole.
5. Attach the rear shock tower extensions to the back side of the rear shock tower using **M3x10 BH** screws through the original shock mount holes of the shock tower.
6. Fasten the inward portion of the rear shock tower extensions using **M3x14 BH** screws down into the original WING mount holes. Do not over-tighten.
7. Using **M3x25 BH** screws and 6 mm stand-offs, fasten the top of shocks to the desired holes in the extension pieces. The recommended setting is the center hole.

CONTENTS:

- Front LEFT Shock Tower Extension
- Front RIGHT Shock Tower Extension
- Rear LEFT Shock Tower Extension
- Rear RIGHT Shock Tower Extension
- 4 each 6mm Shock Mount Stand-Offs
- 2 each Cylinder Mounting Bushings
- 4 each M3x10 BH screws
- 2 each M3x14 BH screws
- 2 each M3x20 BH screws
- 2 each M3x25 BH screws
- 2 each M3x20 BH flanged screws
- 2 each M3 NyLoc

