


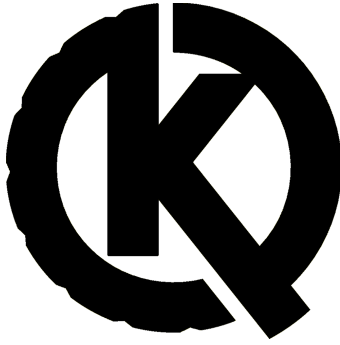

Team QIK Racing

100-48 Shock Pivot Set

Build Guide (24.10.31.03)

PARTS:

- 1) 100-48 Shock Pivot Set

Screws:

- M3x16 CH (2)
- M3x20 CH (2)
- M4x25 FH (4)

Shock Mounting


FRONT

- M4x25 FH (2) - top of shock to shock tower
- M3x16 CH (2) - bottom of shock to suspension arm

REAR


- M4x25 FH (4) - top of shock to shock tower
- M3x20 CH (2) - bottom of shock thru spacer into suspension arm

100-48 Shock Pivot Set

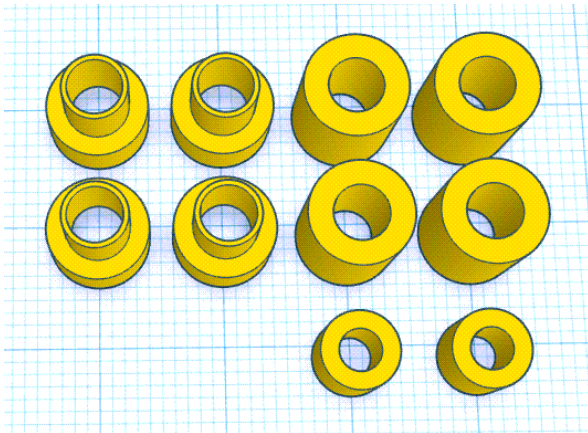

FRONT

- 1) Pivot Set Pivot Tube
- 2) Pivot Set 10 mm Shim
- 3) N/A
- 4) Shock Pivot Ball Tube (comes with the shock)
- 5) M4x25 FH Screw
- 6) M3x16 CH Screw (screw into front arm)

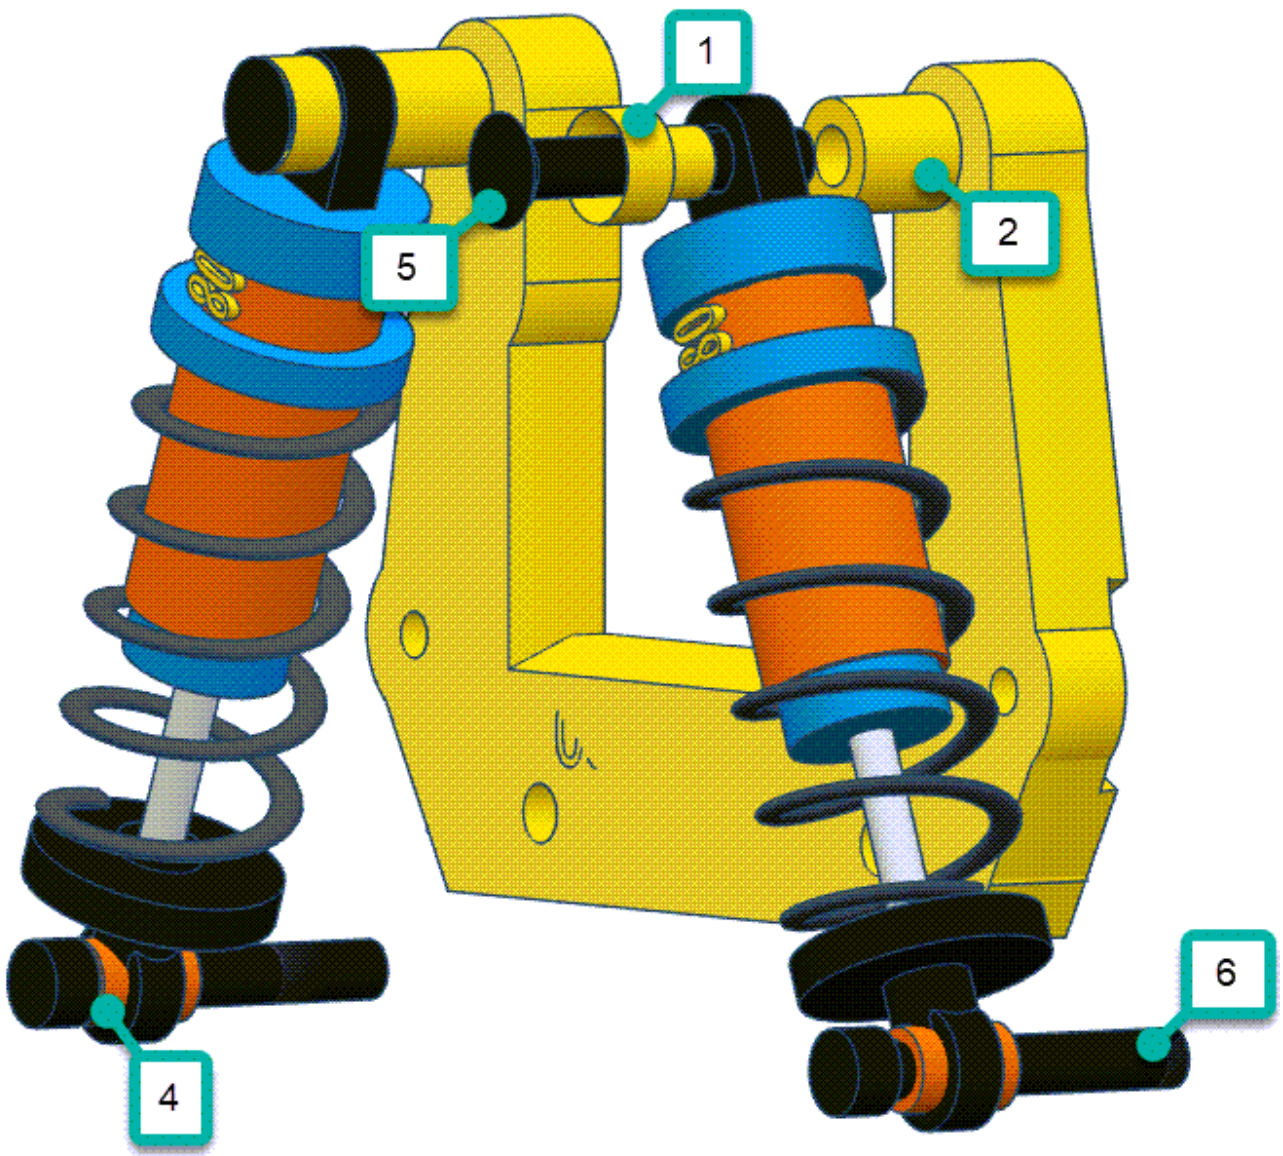

REAR

- 1) Pivot Set Pivot Tube
- 2) Pivot Set 10 mm Shim
- 3) Pivot Set 8mm Shim (small shim)
- 4) Shock Pivot Ball Tube (comes with the shock)
- 5) M4x25 FH Screw
- 6) M3x20 CH Screw (screw into rear arm)

