


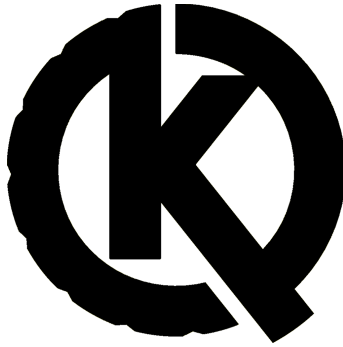

Team QIK Racing™

101-900 Midget OS Body & Cage

Build Guide (24.12.30.01)
INCOMPLETE

1. Attach SCOOP thru Cage Front from below (4x M3 x 5mm)
2. Assemble Cage by Attaching the following components... be sure to “sandwich” the side panels during the next steps...
 - a. Attach NERF to each Cage Side (4x M3x10 FH)
 - b. Attach HEADER to Cage Left Side (2x M3x10 FH)
 - c. Attach HOOD (6x M3x16)
 - i. Attach COVER PANEL to Hood (6x M3x5)
 - d. Attach H-BAR (4x M3x16)
 - e. Attach 3 BARS (6x M3x16)
 - f. Attach FRONT (with scoop) (4x M3x16)
3. Place the CAGE WEDGE, single hole up, on top of the Cage Hood and snug against the front of the Cage Front. Fasten by placing screws thru the bottom of the Cage Hood upwards into the wedge. (2x M3x12)
4. Attach Rear BODY MOUNT to Rear Dual Cross Bar (2x M3x12)
5. Attach HOOD PANEL to Cage Hood and Cage Front Frames (6x M3x5)
6. Install final 2x M3x5 screws in side panels lower rear area

WING OPTION: *Not Included with the 101 Kit (sold separately)*

- Attach 4 Wing Mount Posts using M3 x 12mm screws

CONTENTS:

- 1) 101-901 Cage Left Side
- 2) 101-902 Cage Right Side
- 3) 101-103 Cage Bar Set
- 4) 101-104 Scoop
- 5) 101-105 Cage Hood Frame
- 6) 101-106 Rear Mount Slot
- 7) 101-108 Header Set
- 8) 101-109 Nerf
- 9) 101-125 Driver Perch (optional)
- 10) 101-121 Tank
- 11) 101-122 Tank Cage
- 12) 101-123 Tank Mount
- 13) 100-126-31 Tank Mount Post
- 14) 101-911 Panel Left Side
- 15) 101-912 Panel Right Side
- 16) 101-115 Panel Hood

Panel Set (Sold Separately)

Tank (Sold Separately)

Screw Set:

M3 x 16mm BH (26)

M3 x 12mm BH (4)

M3 x 5mm BH (23)

M3 x 10mm FH (8)

OPTION:

WING SET (Sold Separately)

Wing Mount Post (4)

M3 x 12mm (4)