



112r2-340 Side Arm Kit

Build Guide
(25.05.20.01)

WARNING! DO NOT leave this kit, assembled or unassembled, in a hot motor vehicle or any other high temperature environment. This kit is 3D printed and high temperatures will harm or destroy the components.

CONTENTS:

PARTS

- ☐ 112r2-341 Side Arm (left & right)
- ☐ 112r2-342 Upper Spindle (2 pcs)

HARDWARE

- ☐ M3x12 BH (2)
- ☐ M3x10 FH (2)
- ☐ M3x14 FH (4)
- ☐ M3 NyLoc (2)


WHERE / HOW USED

- ☐ M3x14 FH (4) (not shown) -secure side arms to chassis
- ☐ M3x12 BH (2) (#3) - secure upper spindle to side arm
- ☐ M3x10 FH (2) (#5) - side arm damper mount screw
- ☐ M3 NyLoc (2) (#4) - secure side arm damper mount screw

HARDWARE KEY

BH = Button Head Screw
FH = Flat Head Screw
NyLoc = Nylon Locking Hex Nut

Side Arm Assembly:

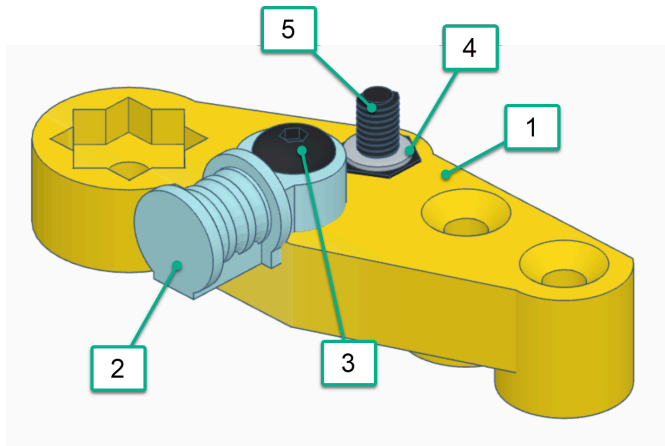

PARTS:

- 1) Side Arm
- 2) Upper Spindle
- 3) M3x12 BH
- 4) M3 NyLoc
- 5) M3x12 FH

Assembly STEPS:

- ☐ Assemble as shown. Repeat to build a left and right side arm assembly

112r2-341 Side Arm	
112r2-342 Upper Spindle	