


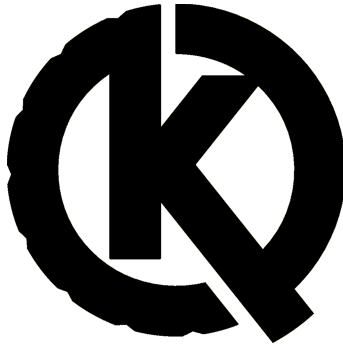

Team QIK Racing

121-920 Midget G Body & Cage

(see <https://teamqik.com/racing> for CLASS
RULES and MORE)

Assembly Instructions (24.10.30.03)
INCOMPLETE (needs images)

CONTENTS:

- 1) 121-103 Cage Bar Set
- 2) 121-105 Cage Hood
- 3) 101-921 Cage Left Side
- 4) 101-922 Cage Right Side
- 5) 101-106 Rear Mount Slot
- 6) 101-108 Header Set
- 7) 101-109 Nerf
- 8) 101-139 Front Body Mount Post 2mm Shim
- 9) 101-121 Tank
- 10) 101-122 Tank Cage
- 11) 101-123 Tank Mount
- 12) 100-126-31 Tank Mount Post
- 13) 121-115 Panel Hood
- 14) 101-931 Panel Left Side
- 15) 101-932 Panel Right Side
- 16) 101-104 Scoop

Driver Perch 101-131 (sold separately)

Panel Set (sold separately)

Tank (sold separately)

Screw Set:

M3 x 16mm BH (26)

M3 x 12mm BH (4)

M3 x 5mm BH (21)

M3 x 10mm FH (6)

OPTION:

WING SET (Sold Separately)

Wing Mount Post (4)

M3 x 12mm (4)

- | | |
|--|--|
| | |
|--|--|
1. Attach SCOOP thru Cage Hood from below (4x M3 x 5mm)
 2. Assemble Cage by Attaching the following components... be sure to “sandwich” the side panels during the next steps...
 - a. Attach NERF to each Cage Side (4x M3x10 FH)
 - b. Attach HEADER to Cage Left Side (2x M3x10 FH)
 - c. Attach HOOD (6x M3x16)
 - i. Attach COVER PANEL to Hood (6x M3x5)
 - d. Attach H-BAR (4x M3x16)
 - e. Attach 3 BARS (6x M3x16)
 - f. Attach FRONT (with scoop) (4x M3x16)
 3. Place the CAGE WEDGE, single hole up, on top of the Cage Hood and snug against the front of the Cage Front. Fasten by placing screws thru the bottom of the Cage Hood upwards into the wedge. (2x M3x12)
 4. Attach Rear BODY MOUNT to Rear Dual Cross Bar (2x M3x12)
 5. Attach HOOD PANEL to Cage Hood and Cage Front Frames (6x M3x5)
 6. Install final 2x M3x5 screws in side panels lower rear area

WING OPTION: *Not Included with the 101 Kit (sold separately)*

- Attach 4 Wing Mount Posts using M3 x 12mm screws