


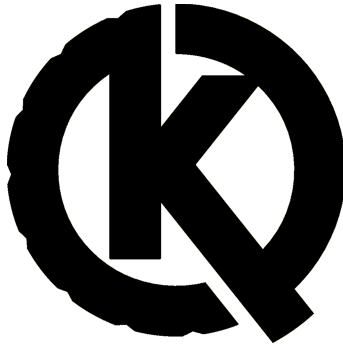

# Team QIK Racing™

## 122-920 Midget Body & Cage

Build Guide (24.12.30.01)

### CONTENTS:

- 1) 122-921 Cage Left Side
- 2) 122-922 Cage Right Side
- 3) 122-103 Cage Bar Set
- 4) 122-105 Cage Hood
- 5) 122-106 Rear Mount Slot Shim
- 6) 101-106 Rear Mount Slot
- 7) 101-109 Nerf
- 8) 101-128 Midget Header
- 9) 101-121 Tank
- 10) 101-122 Tank Cage
- 11) 101-123 Tank Mount
- 12) 101-126-21 Tank Mount Post
- 13) 122-931 Panel Left Side
- 14) 122-932 Panel Right Side
- 15) 101-104 Scoop
- 16) 122-115 Panel Hood

Driver Perch 101-131 (sold separately)

Panel Set (sold separately)

Tank (sold separately)

#### Screw Set:

M3x5 BH (21)

M3x16 BH (20)

M3x8 FH (1)

M3x10 FH (5)

1. Attach SCOOP thru Cage Hood from below (4x M3 x 5mm)
2. Assemble Cage by Attaching the following components... be sure to “sandwich” the side panels during the next steps...
  - a. Attach NERF to each Cage Side (4x M3x10 FH)
  - b. Attach HEADER to Cage Left Side (M3x8 FH in front & M3x10 FH in rear)
  - c. Attach HOOD (4x M3x16)
    - i. Attach COVER PANEL to Hood (8x M3x5)
  - d. Attach H-BAR (4x M3x16)

- e. Attach 3 BARS (6x M3x16) (depending on battery thickness, it may require leaving one bar off)
  - f. Attach FRONT (with scoop) (4x M3x16)
3. Attach Rear BODY MOUNT to Rear Dual Cross Bar (2x M3x116)
  4. Attach HOOD PANEL to Cage Hood and Cage Front Frames (6x M3x5)
  5. Install final 2x M3x5 screws where needed.

